


Scope of delivery

- ✓ SQ Panel
- ✓ Gateway
- ✓ Green micro USB cable – power supply
- ✗ Ethernet cable not included
- ✗ USB Type-C cable not included

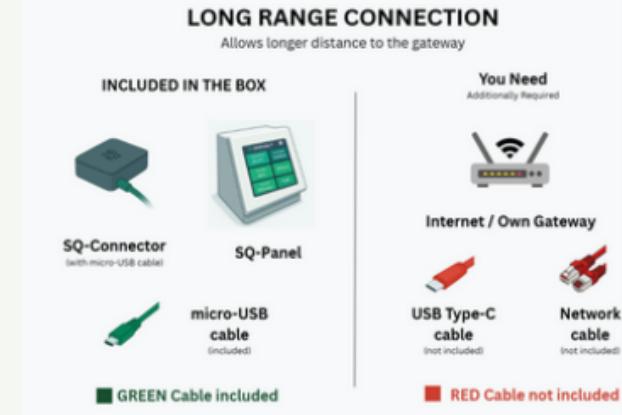

Requirements

- ✓ Smartphone (Android or iOS)
- ✓ Bluetooth enabled
- ✓ Wi-Fi (2.4 GHz)
- ✓ Router with free Ethernet port
- ✓ Carenuity app installed

⚠ Bluetooth must be enabled on the smartphone



Scan for Google Play Store



Scan for Apple AppStore



SQ Panel Quick Start Guide



Für schnelle Inbetriebnahme
in wenigen Minuten

Product information

- Product: Carenuity SQ Panel
- Version: v1.0.8
- Language: German
- Year: 2026

<https://carenuity.com/help-center>



Setup – Steps 1-2

1. Connect the gateway

- Connect the Ethernet cable to the router
- Connect the power supply
 - The LED lights up

2. Open the app

Launch the Carenuity app
Select “Register gateway”

- LED flashes yellow → Start process
- LED lights up continuously → Ready

Commissioning – Steps 3-5

3. Activate Matter (optional)

Provide the Matter ID to the coordinator
(Alexa, Apple Home, etc.)

4. Scan SQ Panel

Scan the QR code on the display

5. Done

Device is successfully connected
Further configuration takes place in the
app

Help & Support

QR code

carenuity.com/help-center

info@carenuity.com

+49 89 1222469-40

Mon-Fri · 9:00 a.m.-5:00 p.m. CET

Response within 24 hours (business
days)

